


Alpenföhn®

1. ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
2. UNDER NO CONDITION SHALL ALPENFÖHN BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.
3. PLEASE ASK FOR PROFESSIONAL HELP IF YOU ARE NOT SURE OF SAFE INSTALLATION.
4. PLEASE READ THE SAFETY INSTRUCTIONS ON OUR WEBSITE BEFORE YOU INSTALL THE PRODUCT: INFO.EKL.EU

Caution:


When switching on your system for the first time, an gurgling noise may occur, which disappears after a few seconds. Turn your system so that any air bubbles can escape upwards into the radiator. The pump should not be the highest point in the water circuit.

01. Buckle and accessories

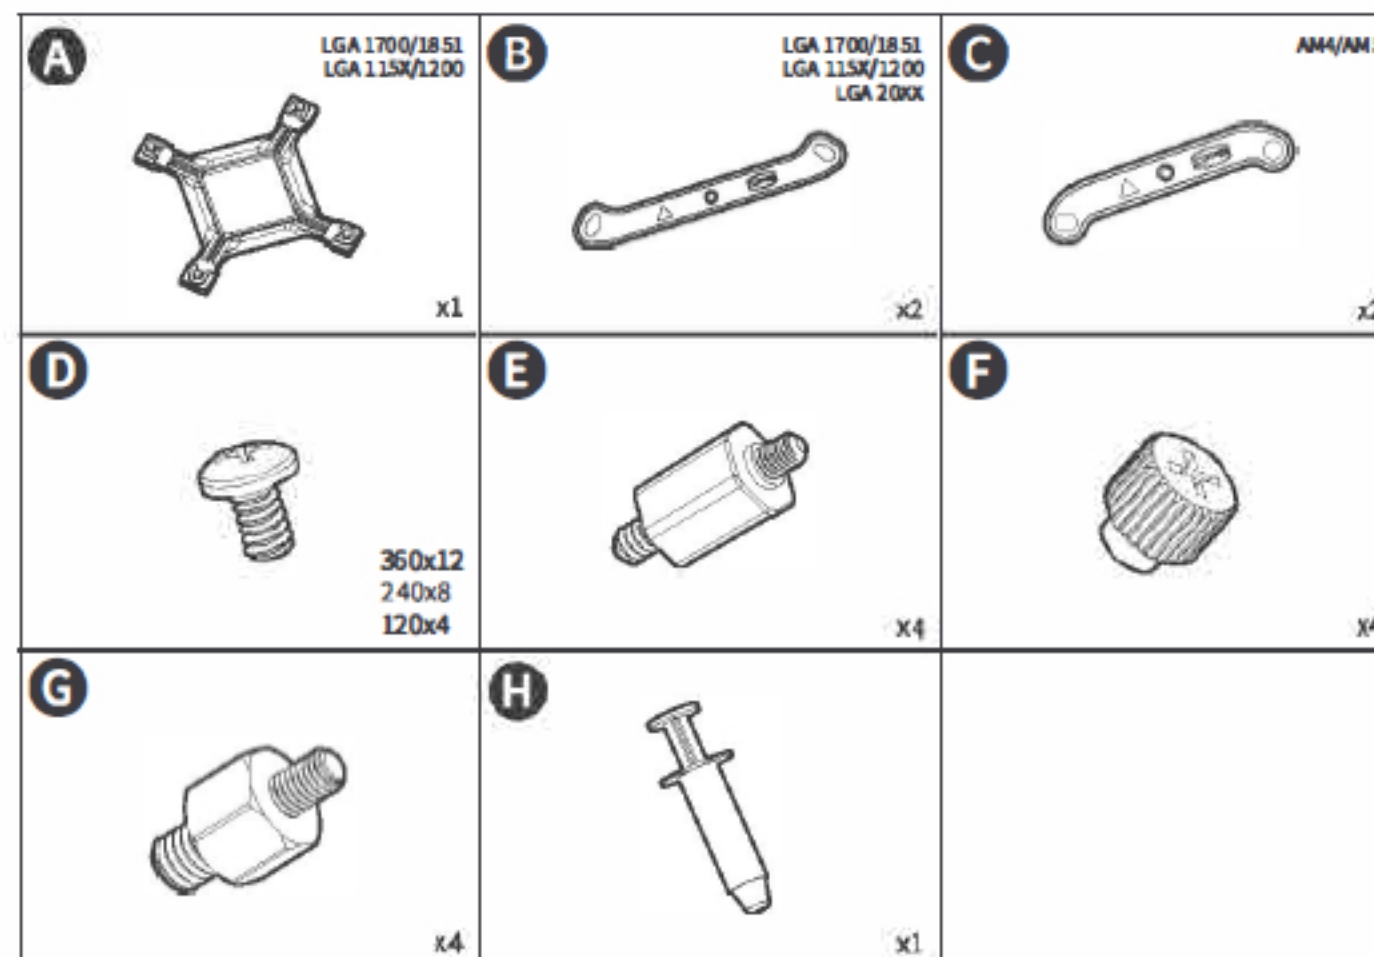


INTEL: **A B E F**
INTEL 20XX: **B G F**
AMD: **C E F**


02. 120Fan water drain installation

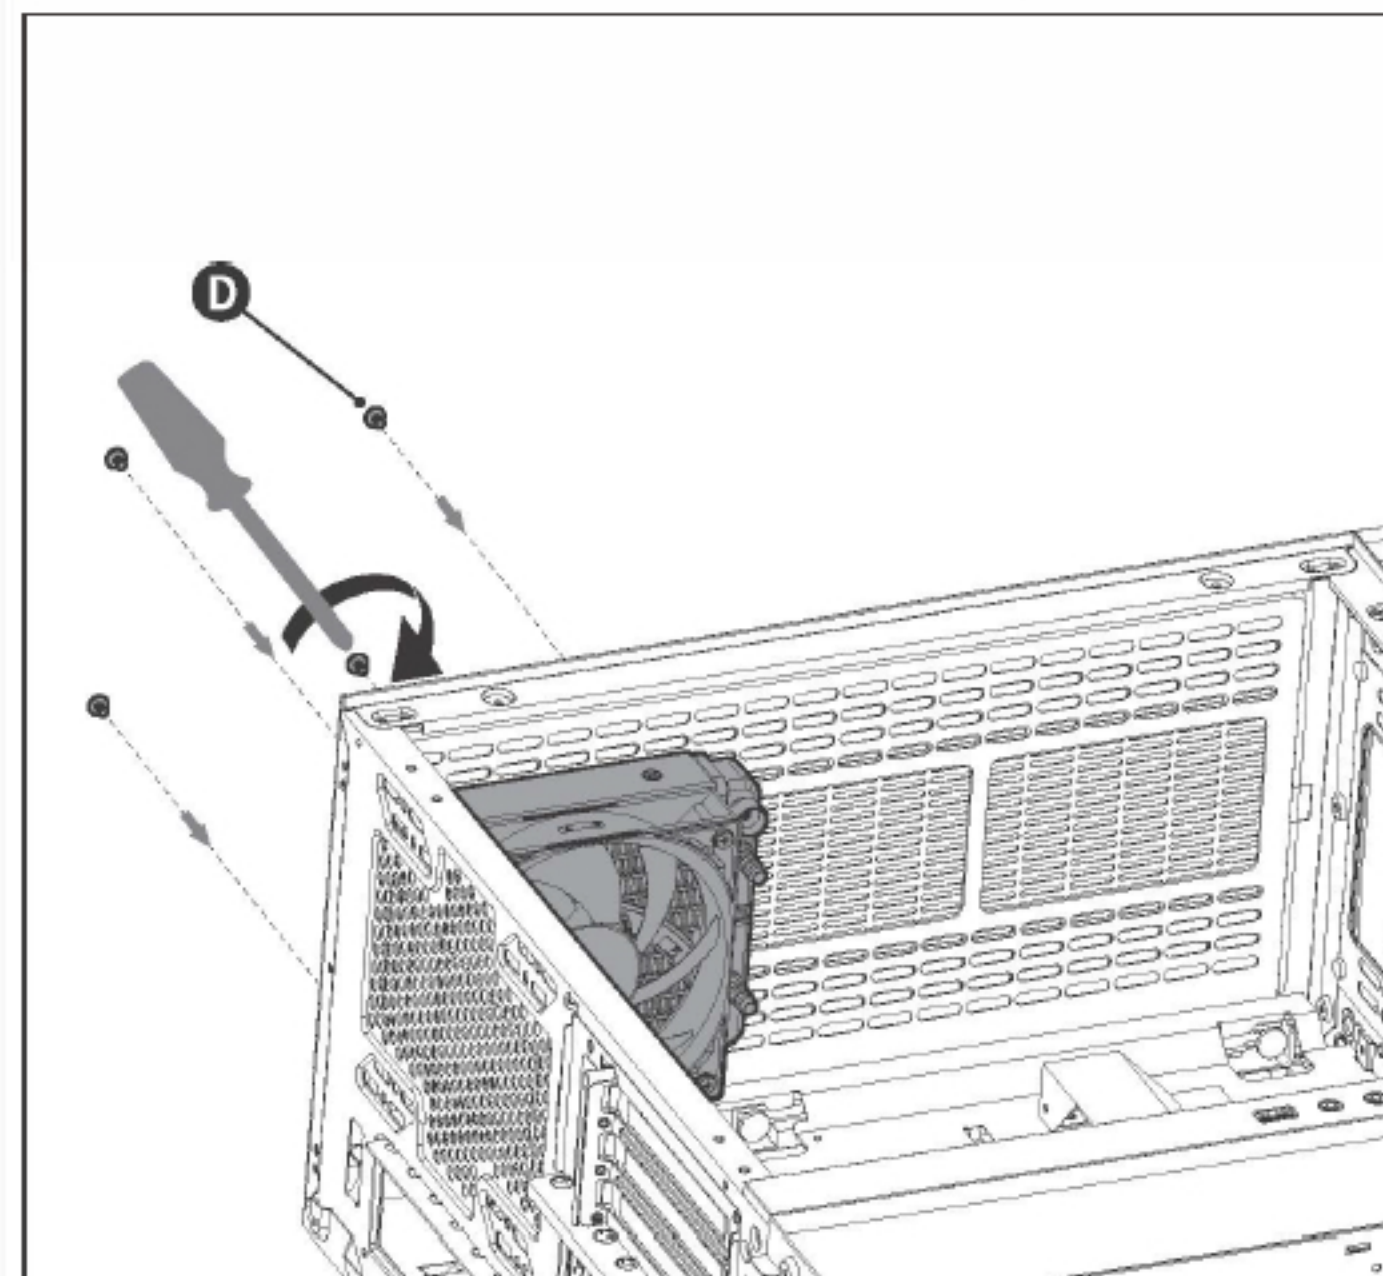


03. 240Fan water drain installation

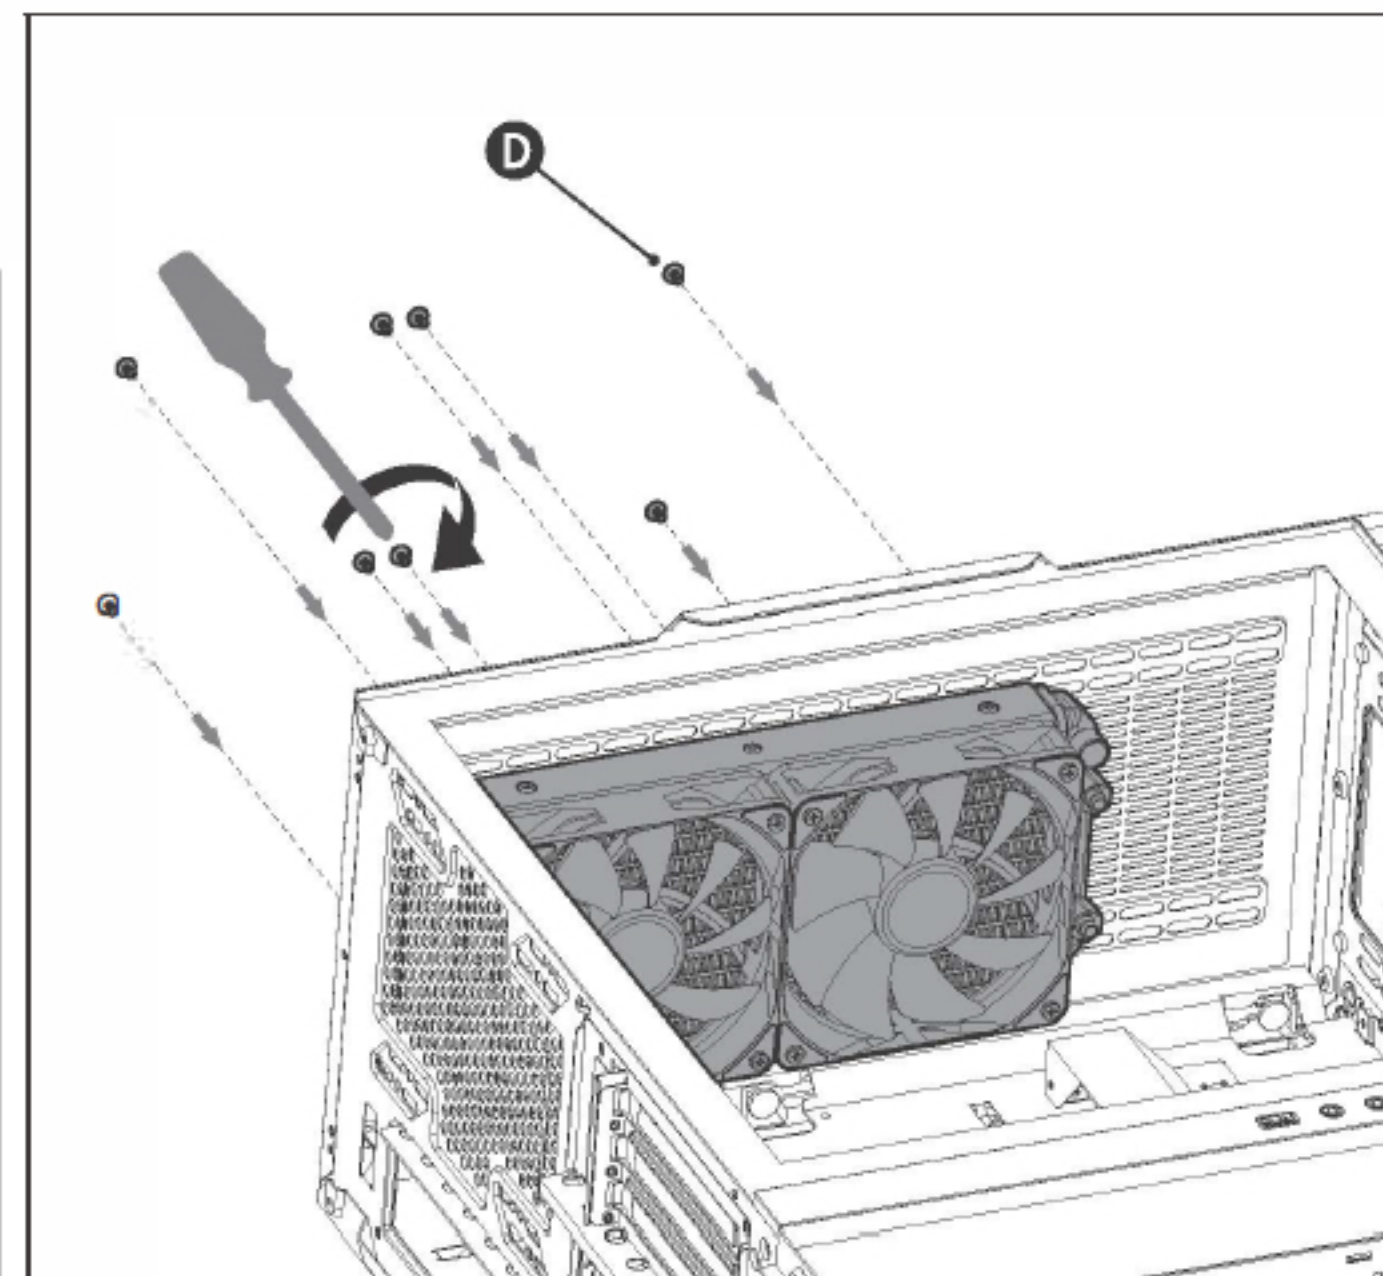


04. 360Fan water drain installation

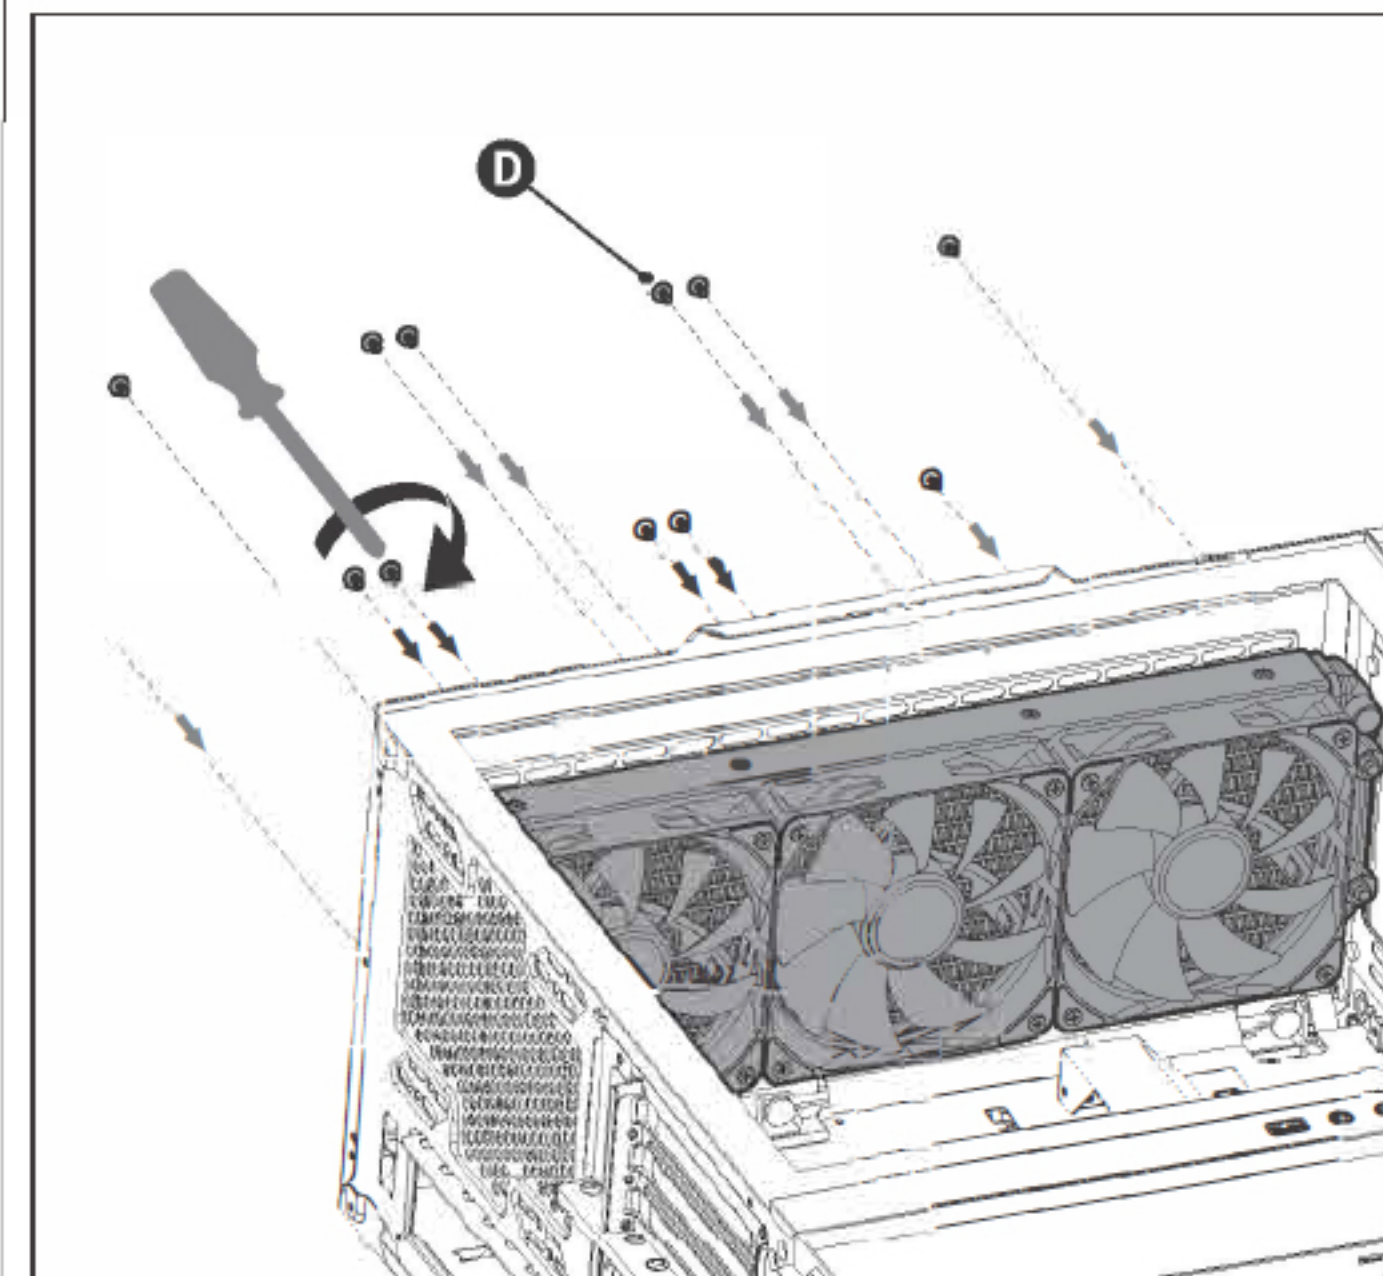


05. INTEL- LGA 1851 /1700/1200/115X

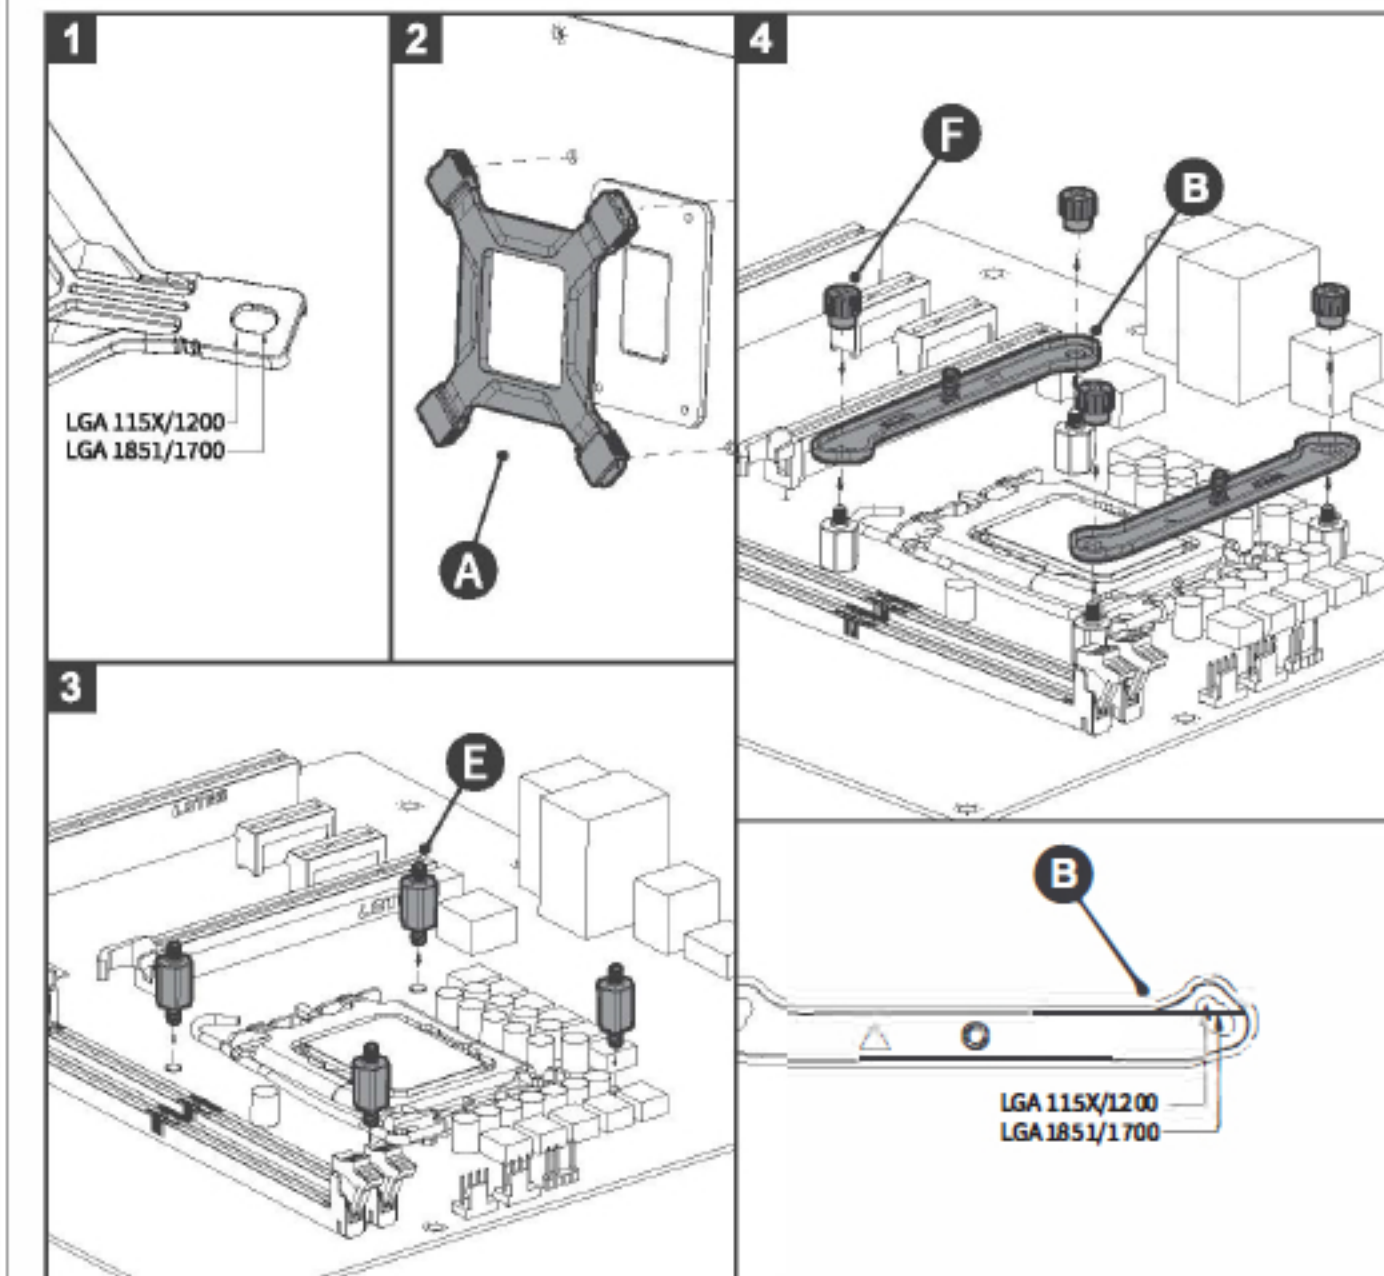


06. INTEL- LGA 20XX

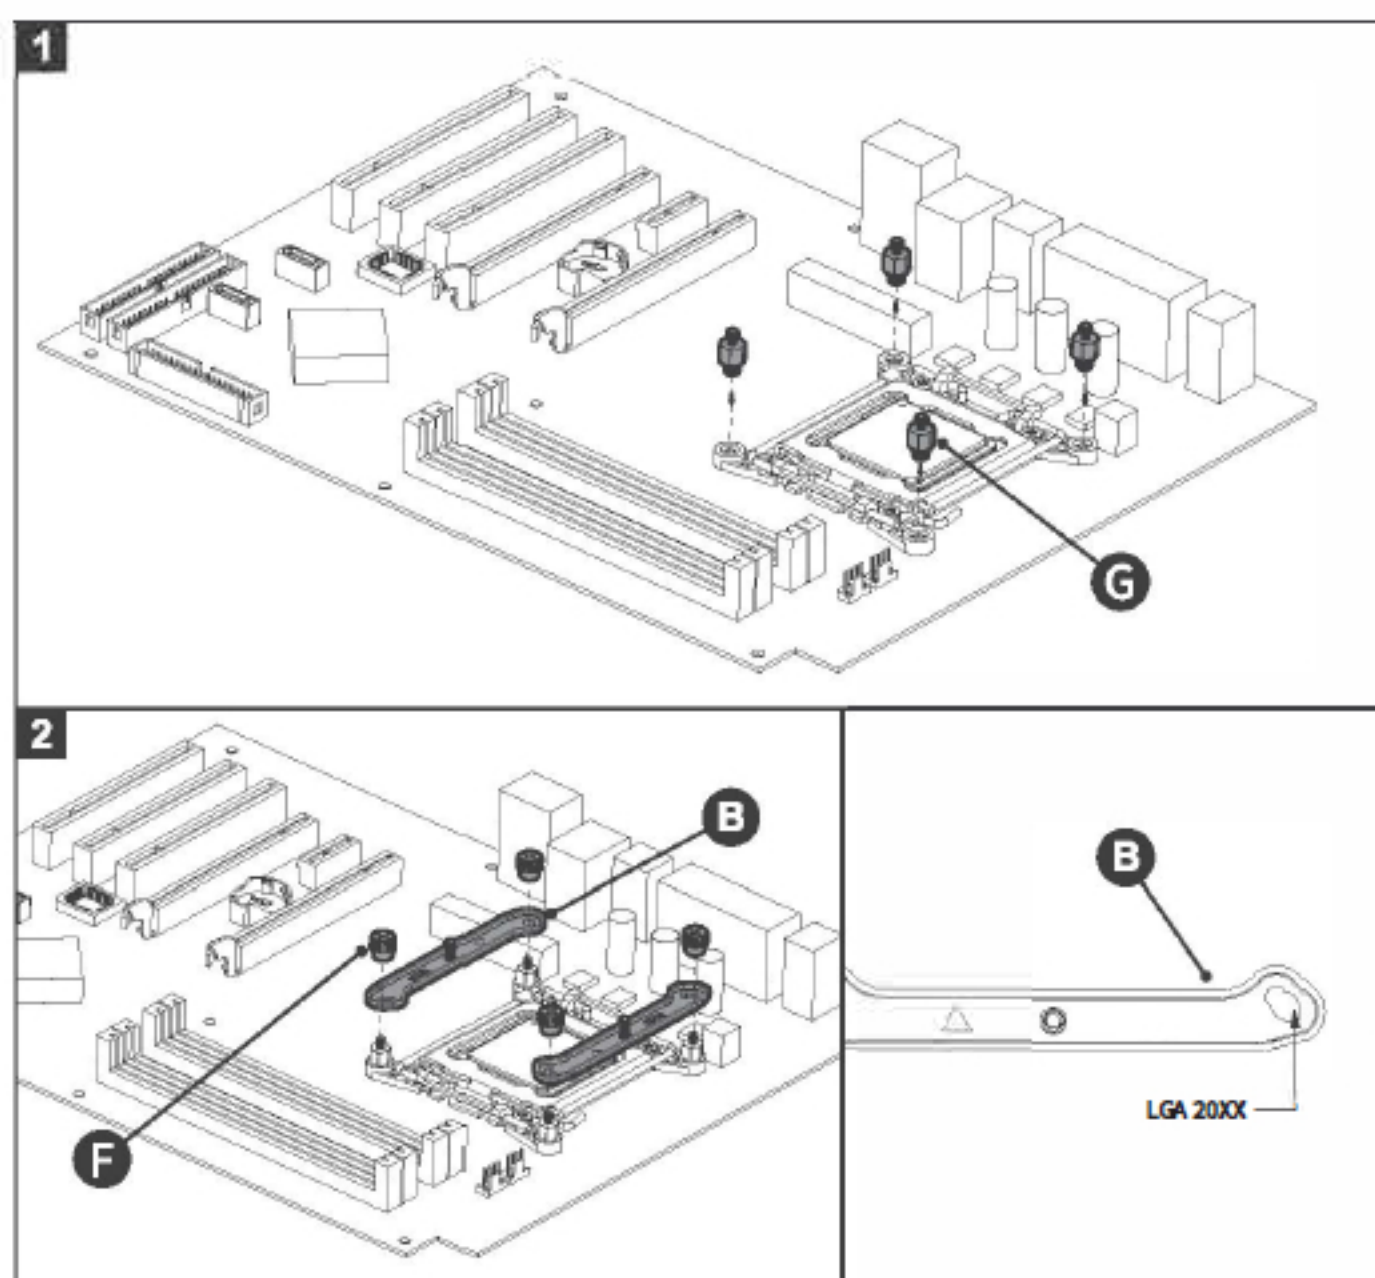


07. AMD - AM5/AM4

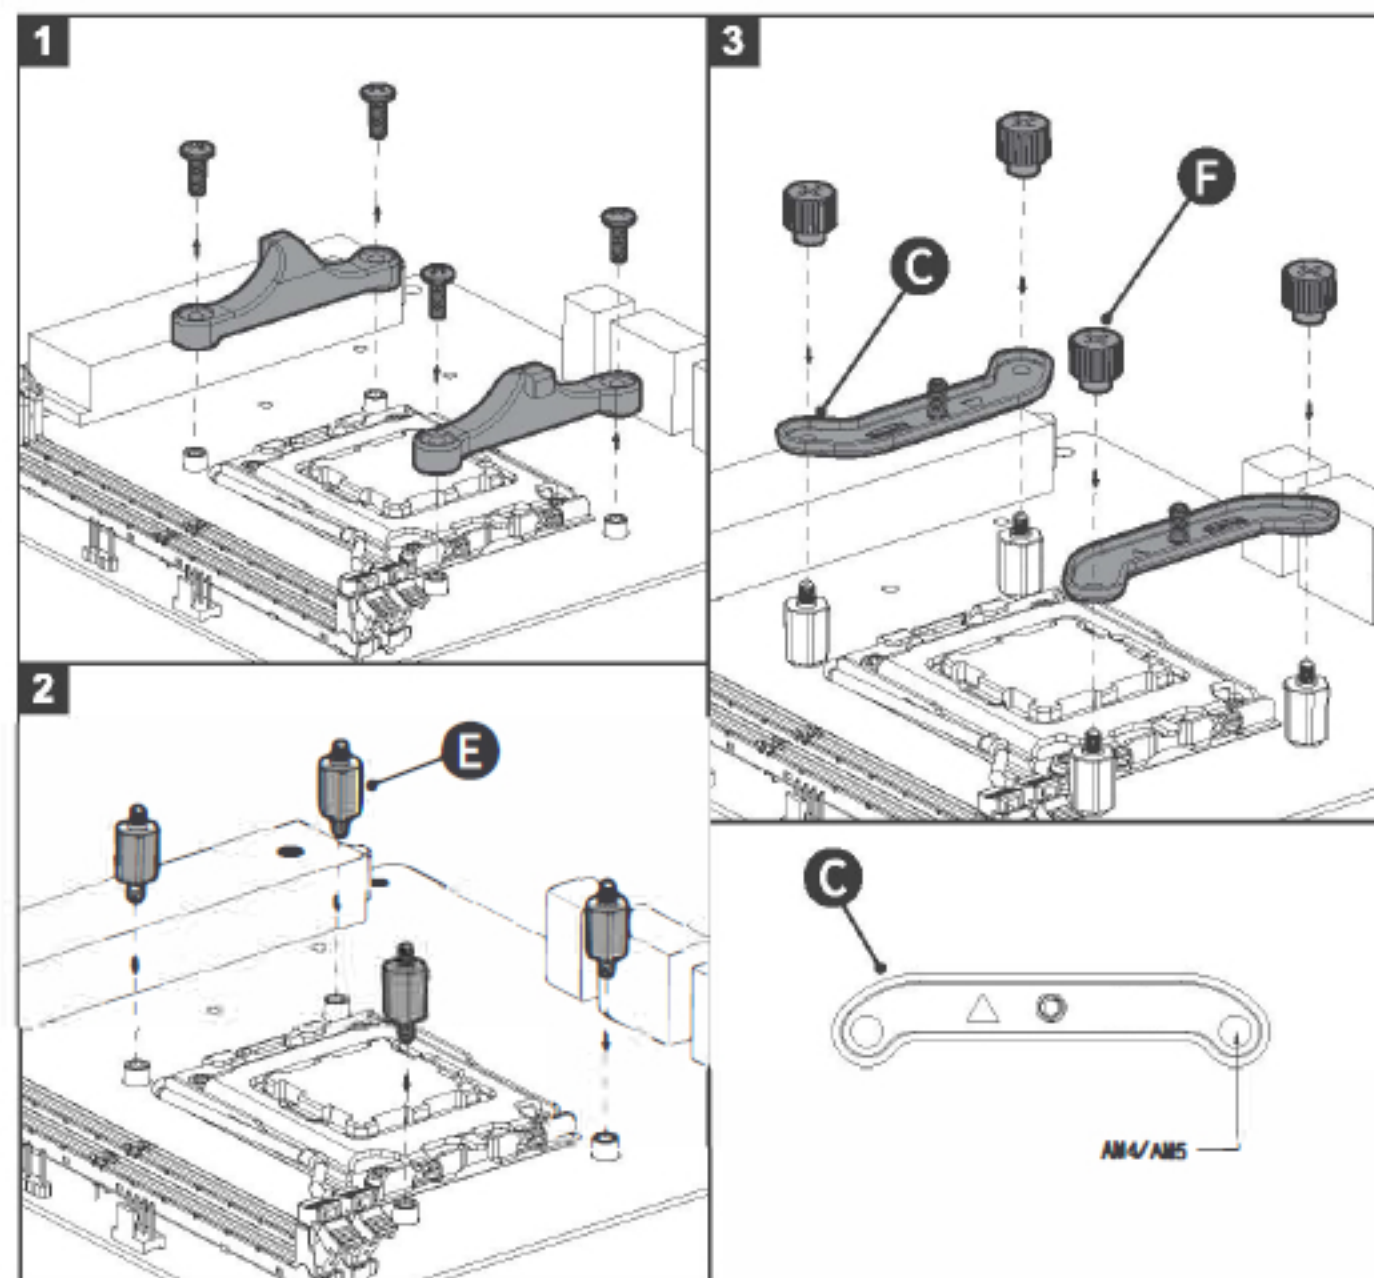


08. INTEL&AMD

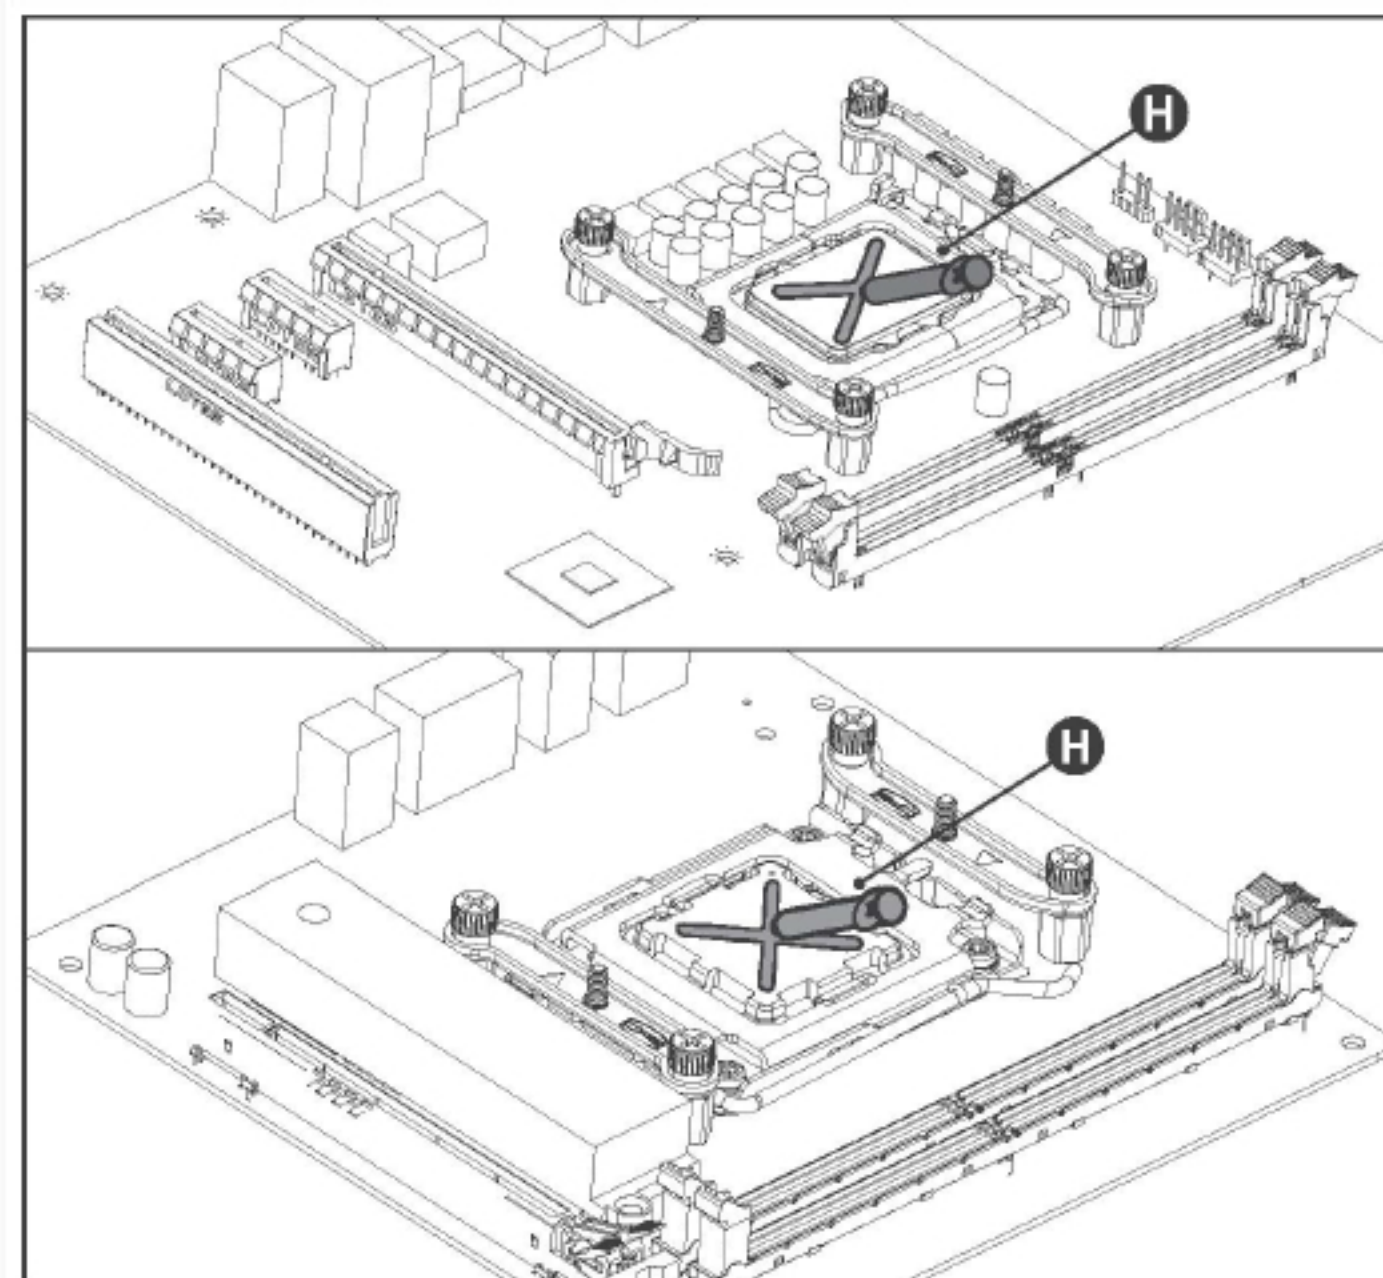

09. INTEL&AMD

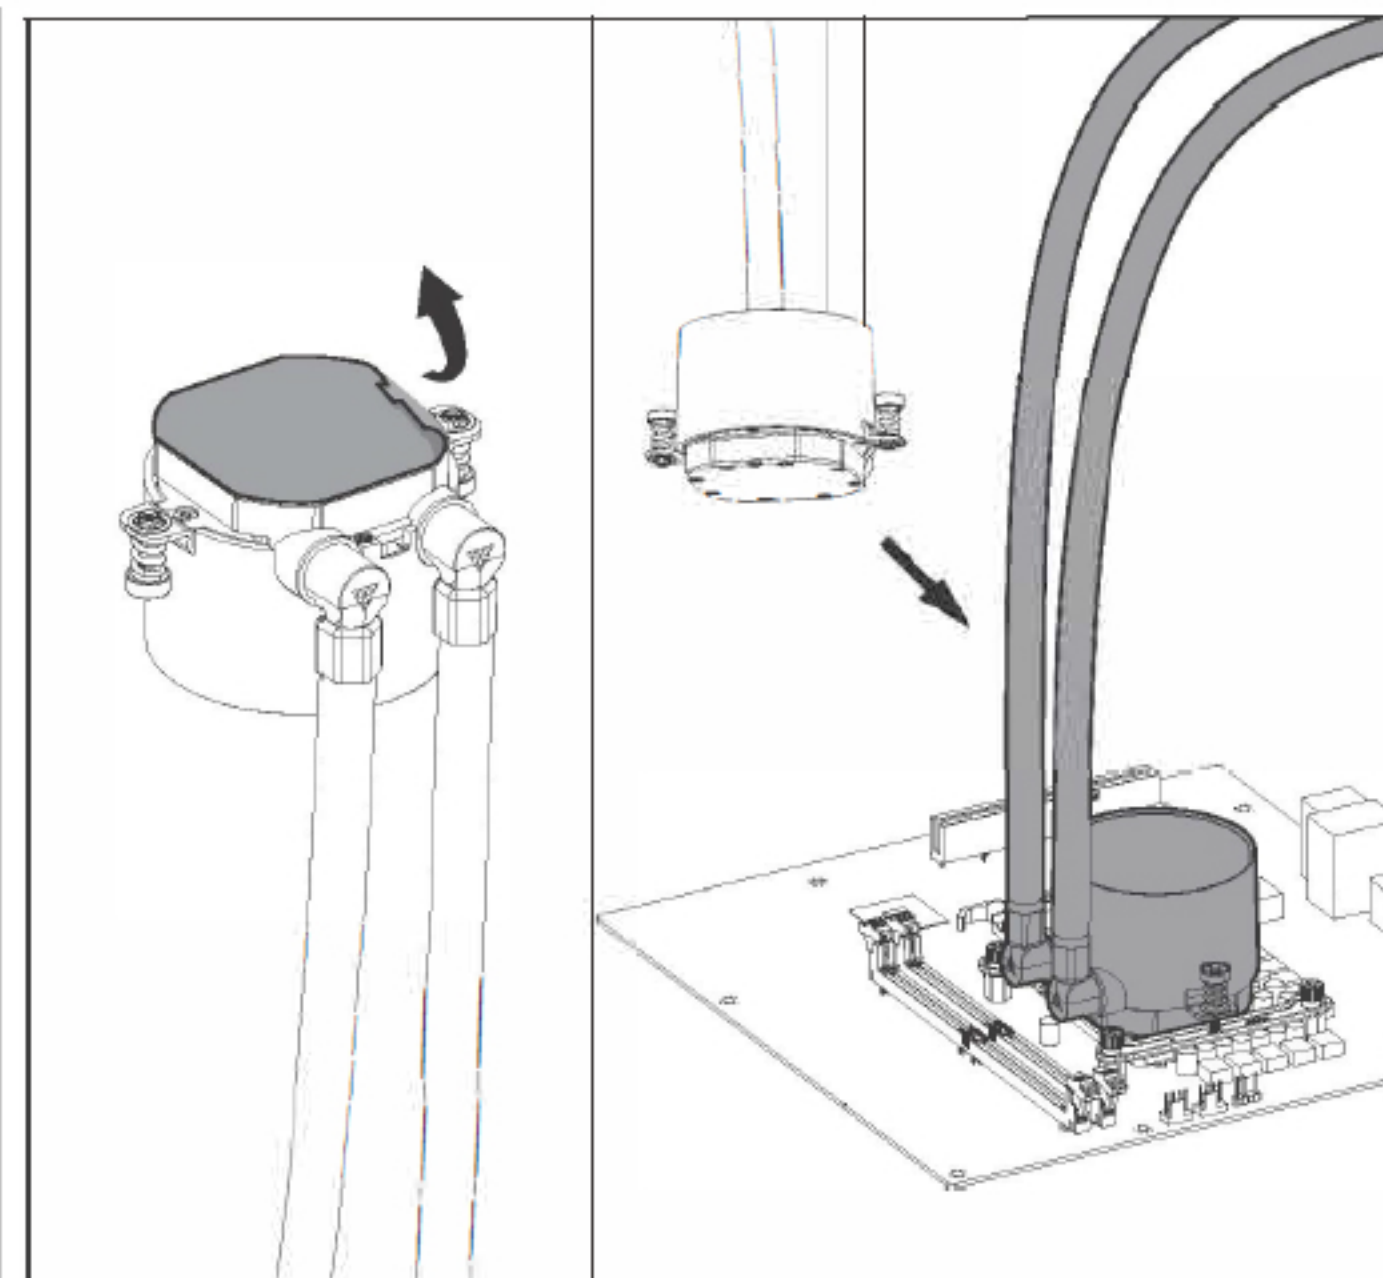

10. 360/240/120Fan pump wiring diagram (ARGB)

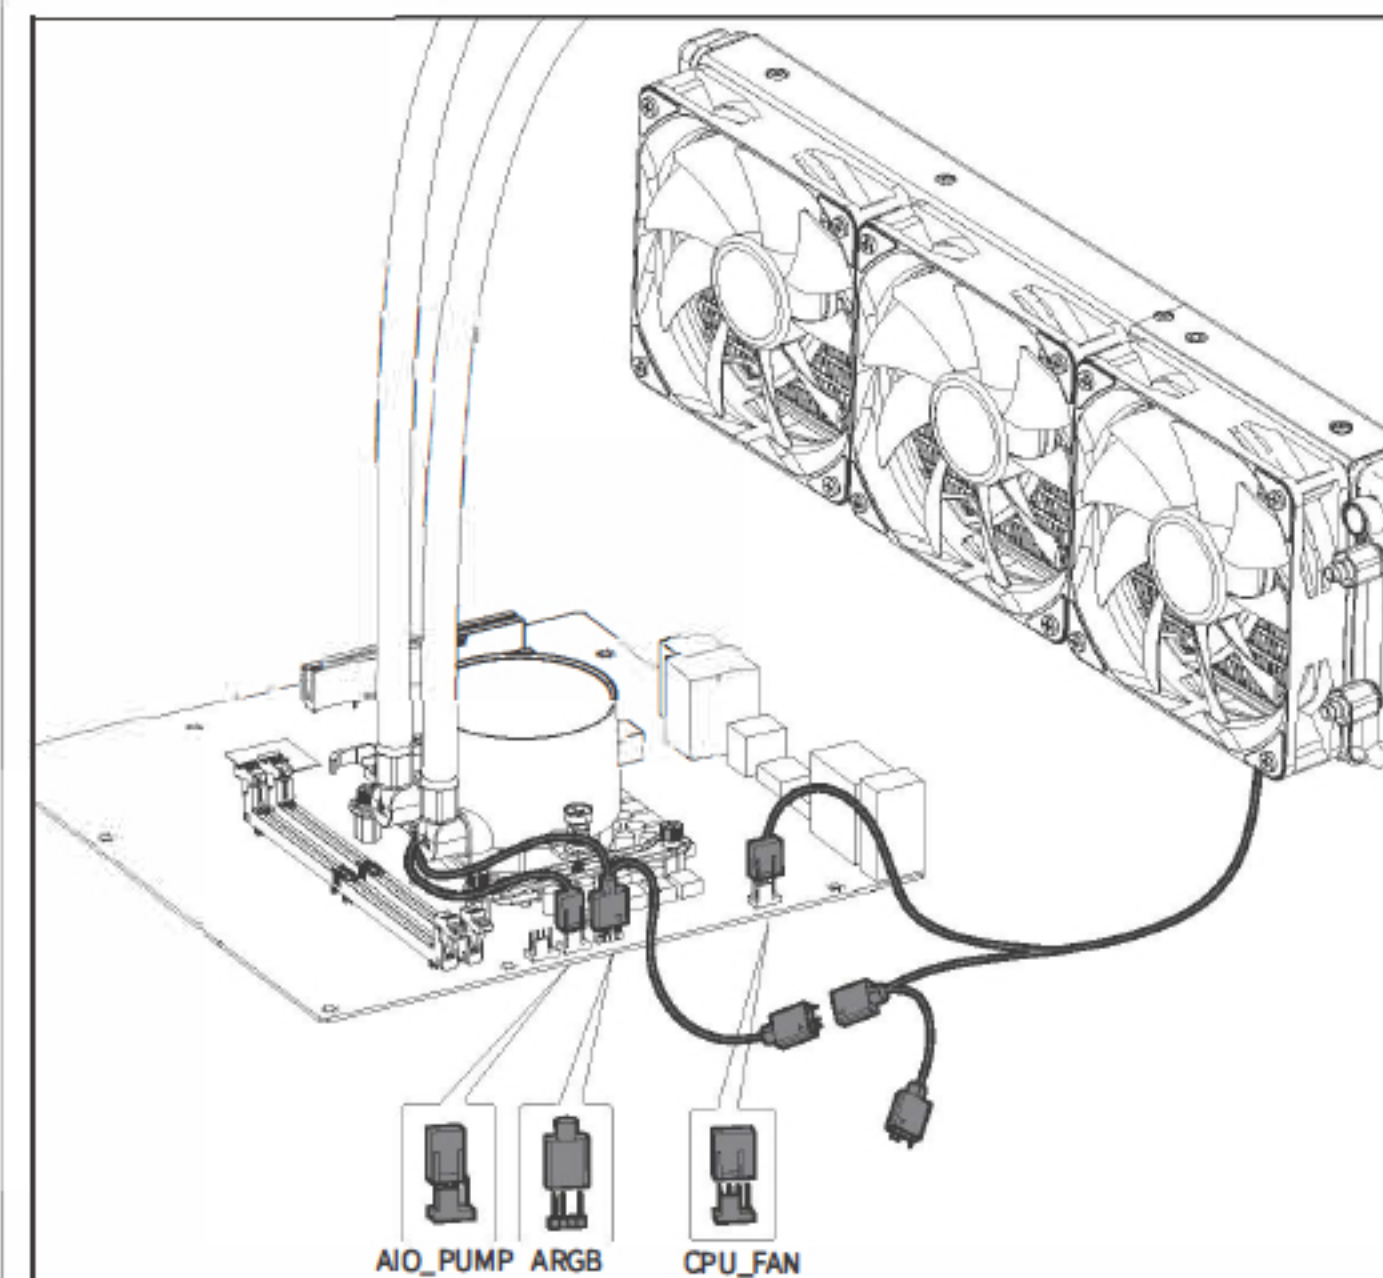

11. 360/240/120Fan pump wiring diagram (Digital)

